

Please consult a qualified plumber if unsure about correct installation procedure. Rainwater HOGs must be installed in accordance with these instructions. Rainwater HOG LLC takes no responsibility for any loss or damage caused by the use of the HOG and/or accessories. In the interests of continuing product improvement, specification may change without notice.

INSTALLATION

HORIZONTAL (ON GROUND / UNDER DECKS)

1. Arrange HOGs on a slope of 1 in 100 (1°) with the inlet (top) end higher than the outlet (bottom) end. You may need to provide a thin layer of sand to ensure an even bearing surface and to create the required fall.

2. Ensure HOGs don't slip or move when full. Use stakes, blocks or bedded sand if necessary.

3. Saw top off nub of inlet HOG (see 'Inlet'). Affix 90° Ø31/2" elbow (not supplied) with plumbers tape over collar of inlet.

4. Attach elbow vents to the top holes, and Connectors and Outlet to bottom holes.

5. Attach and direct overflow hose (see 'Plumbing').

6. Place Inlet Screen over inlet opening under downspout (see 'Plumbing').

Stake base if necessary Inlet Outlet 100

VERTICAL (ON WALL)

1. Place Wall Channels horizontally at center height of 351/2" (900mm) from base level and fix to wall using appropriate fixings (not supplied). Ensure the HOGs are sitting on a firm, stable and level surface. 2. Position Spring Nuts 191/2" (500mm) apart between HOGs and 9 3/4" (250mm) from edge. 3. Saw the top off the inlet HOG nub along the ridged line to form a 3½ inch opening.

4. Attach Elbow Vents to the top holes and attach

20"

(508mm) ^{typ}

Inlet hole

Inlet HOG

Domed Nut

Spring Nut

Connector

Patent Pending


Outlet


Plate -

Ē

Connectors and Outlet to bottom holes.

5. Attach and direct overflow hose (see 'Plumbing'). 6. Place Inlet Screen over inlet opening under downspout (see Plumbing). 7. Stand HOG in position and bolt the Plate through the HOG into the Spring Nut.

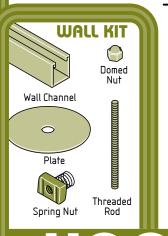


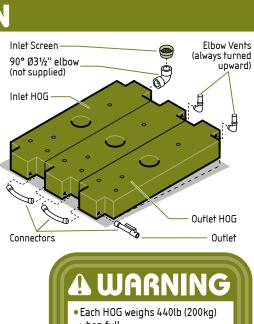


- when full. HOGs must always be installed
- so that the weight is supported on a firm surface.
- Always ensure that the HOG is secure
- The Wall Kit stabilizes the HOG laterally and is NOT intended to carry any weight. Wall mounted HOGs must be installed bearing on the ground or another stable structure.

Wall Channel Spring Nut LOCATING WALL CHANNEL 10" (254mm)

> Spring Nuts Wall Channels located in centre of "O" 351/2" (900mm)

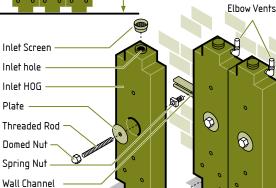

PLUMBING

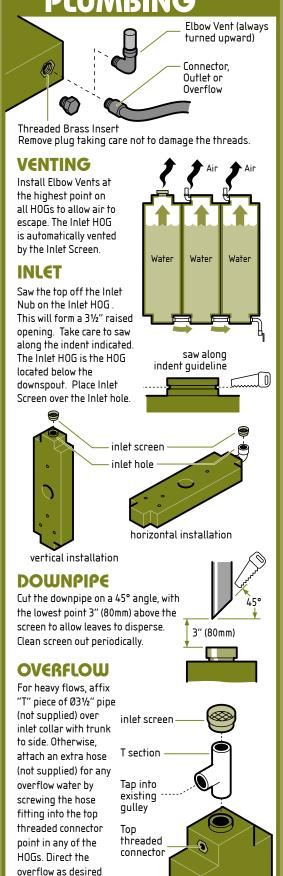

www.rainwaterhog.com Toll Free Number 1888 700 1096

HOG

using the hose.

rainwater rescue

every drop helps

Ø

3